























STEP 10: Wait for 3 minutes until system boot up properly, you may now open your web browser, and input <a href="http://172.16.0.1">http://172.16.0.1</a> to logon MCU web configuration page.



Default username/password: admin/123 Default IP address: 172.16.0.1 (Eth0)

Note: Please refer to related chapter in user's manual CD for further configurating