


**VERIFY THE CONTENTS INSIDE PACKAGE BOX**

The package should contain the items plus XRT-401F. If any item is missing or damaged, please contact the seller immediately

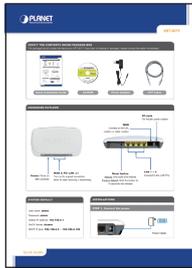

**Quick Installation Guide**



**CD-ROM**



**Power Adapter**




**UTP Cable**

**HARDWARE OUTLOOK**



**Power:** Turns on after powered

**WAN & Per LAN LED**  
Turn on for a good connection  
Blink for data receiving / transmitting

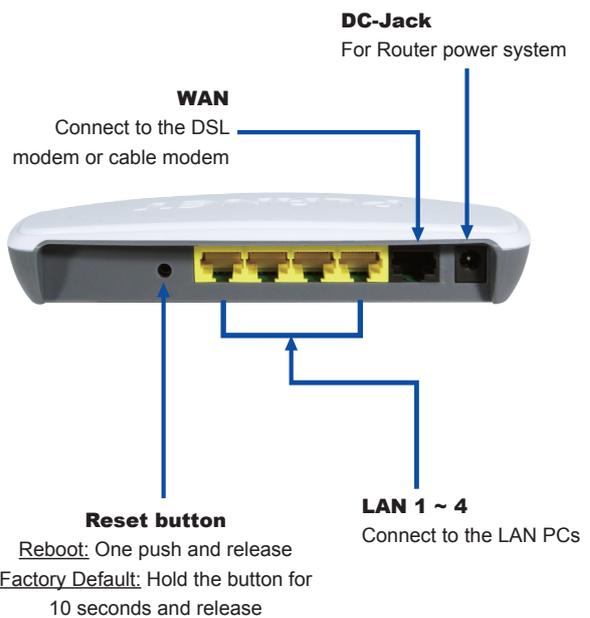


**SYSTEM DEFAULT**


User name: **admin**  
Password: **admin**  
Default IP address: **192.168.0.1**  
DHCP Server: **Enable**  
DHCP IP pool: **192.168.0.2 ~ 192.168.0.100**

**INSTALLATIONS**


**STEP 1. Connect the power**

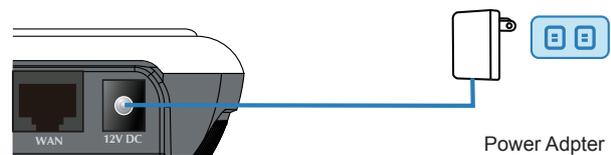


**STEP 2. Connect to the xDSL modem / cable modem**

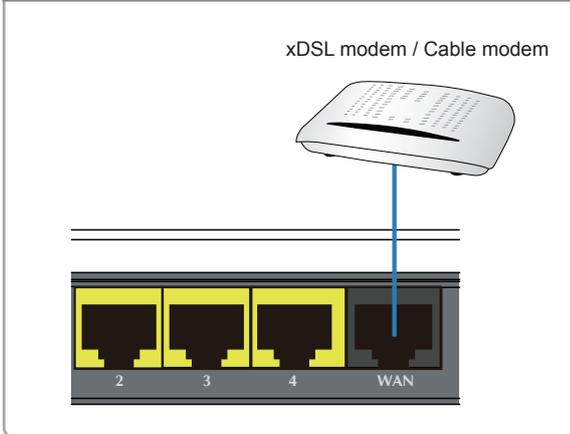

**STEP 3. Connect to the PC or Laptop (DHCP client mode)**

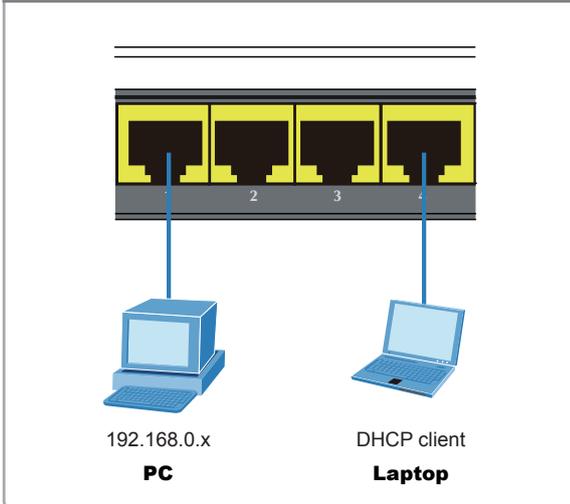


**STEP 4. Bring up the Web Browser and in the Address Field, key in "http://192.168.0.1" and the Login page prompt for User name and Password. Just key in "admin" for both.**

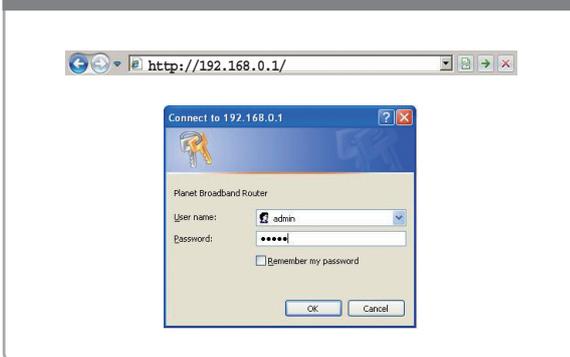

**STEP 5. Click on Quick Setup and follow the Wizard for the step by step instruction.**

**STEP 6. Choose your time zone of your location and. Next**


**STEP 7. WAN mode selection. Please check with your ISP for the connection type. Click on Manual if you already got the information from your ISP.**

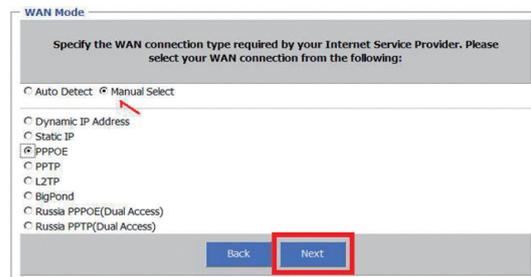

**STEP 8. At the last step, it ask for the DNS IP address, key in the DNS provided from your ISP and click on Finish, then your XRT-401F is ready to connect to the Internet.**



After the Router Reboot, the status page will prompt you the connection information as the example figure below. You can just check the System Date (Network Time) to see if the Internet is on or not.

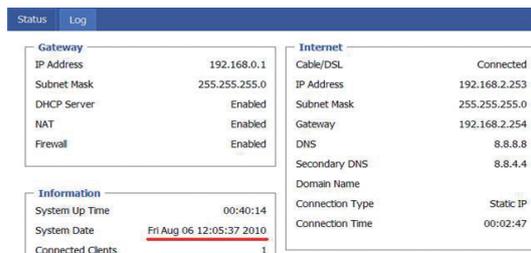

Now, your XRT-401F is ready for service and you can then check the CD-ROM manual for more configurations to this Router.