

## **WGSW-20160HP**

16-Port Gigabit 802.3at PoE  
+ 4G TP/SFP Combo Managed Switch

## **WGSW-24040HP**

24-Port 10/100/1000Mbps 802.3at PoE  
with 4 Shared SFP Managed Switch

## **WGSW-24040HP4**

24-Port 10/100/1000Mbps 802.3at PoE  
with 4 Shared SFP Managed Switch (440W)

Quick Installation Guide

# Table of Contents

1. Package Content.....	3
2. Requirements .....	4
3. Terminal Setup .....	5
4. Logon to the Console .....	6
5. Configure IP Address .....	7
6. Start Web Management.....	9
Customer Support.....	12

---

## 1. Package Content

Thank you for purchasing PLANET 16-/24-Port Gigabit 802.3at PoE Managed Switches, WGSW-20160HP / WGSW-24040HP / WGSW-24040HP4. The description of these models is as follows:

**WGSW-20160HP :**

16-Port 10/100/1000Base-T 802.3at PoE + 4-Port Gigabit TP/SFP Combo Managed Switch

**WGSW-24040HP :**

24-Port 10/100/1000Base-T 802.3at PoE with 4 Shared SFP Managed Switch / 220W

**WGSW-24040HP4 :**

24-Port 10/100/1000Base-T 802.3at PoE with 4 Shared SFP Managed Switch / 440W

“**Managed Switch**” will also be mentioned as an alternative to the above three models in this Quick Installation Guide.

Open the box of the **Managed Switch** and carefully unpack it. The box should contain the following items:

- The Managed Switch x 1
- User’s Manual CD x 1
- Quick Installation Guide x 1
- RS232 Cable x 1
- Rubber Feet x 4
- Two Rack-Mounting Brackets with Attachment Screws x 1
- Power Cord x 1

If any item is found missing or damaged, please contact your local reseller for replacement.

## 2. Requirements

- Workstations of subscribers running Windows XP/2003/Vista/7/8/2008, MAC OS9 or later, Linux, UNIX or other platforms compatible with TCP/IP protocols.
- Workstation installed with Ethernet NIC (Network Interface Card)
- **Serial Port Connect** (Terminal)
  - The above PC with COM Port (DB9)
- **Ethernet Port Connect**
  - Network cables - Use standard network (UTP) cables with RJ-45 connectors.
  - The above PC is installed with WEB Browser and JAVA runtime environment Plug-in




### Note

1. It is recommended to use Internet Explore 7.0 or above to access the Managed Switch.
2. The WGSW-20160HP is picked for this installation guide as they (the WGSW-24040HP and WGSW-24040HP4) come with the same configuration and PoE feature.

### 3. Terminal Setup


To configure the system, connect a serial cable to a **COM port** on a PC or notebook computer and to serial (console) port of the Managed Switch. The console port of the Managed Switch is **DCE** already. So, you can connect the console port directly to the PC without the need of Null Modem.

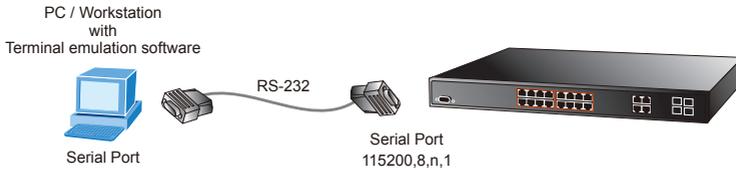

A terminal program is required to make the software connection to the Managed Switch. Windows' **Hyper Terminal** program may be a good choice or please download the other hyper terminal like software, such as putty. The Hyper Terminal can be accessed from the **Start** menu.

1. Click **START**, then **Programs, Accessories** and then **Hyper Terminal**.
2. When the following screen appears, make sure that the COM port should be configured as:

- ◆ Baud : 115200
- ◆ Data bits : 8
- ◆ Parity : None
- ◆ Stop bits : 1
- ◆ Flow Control : None

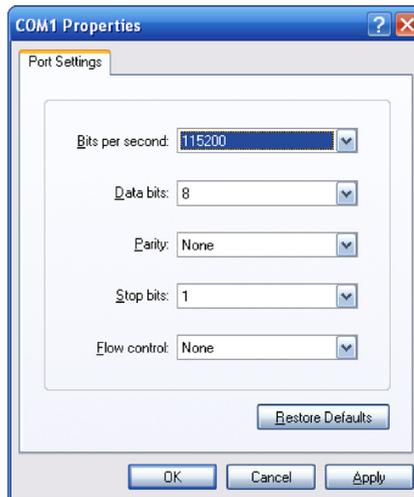

## 4. Logon to the Console

Once the terminal is connected to the device, power on the Managed Switch. The terminal will start running testing procedures.

Then, the login username and password are requested. The factory default username and password are as follows, and the login screen in Figures 4-1 appears.

Username: **admin**  
Password: **admin**

```
-ROM: 0x80000000-0x83000000 [0x80020d78-0x87fe1000 available]
FLASH: 0x40000000-0x40ffffff, 256 x 0x10000 blocks
== Executing boot script in 3.000 seconds - enter ^C to abort
> fis load -d managed
Image loaded from 0x80040000-0x809256d8
? go

Welcome to PLANET Command Line Interface.
Port Numbers:

-----VCSW-20160HP-----
| 2| 4| 6| 8| 10|12|14|16|      |18|20| |18|20|
| 1| 3| 5| 7| 9|11|13|15|      |17|19| |17|19|
-----

Username:
```

Figure 4-1: Managed Switch Console Login Screen



### Note

1. For security reason, please change and memorize the new password after this first setup.
2. Only accept command in lowercase letter under console interface.

## 5. Configure IP Address

The Managed Switch is shipped with default IP address shown below:

```
IP Address: 192.168.0.100
Subnet Mask: 255.255.255.0
```

To check the current IP address or create a new IP address for the Switch, please use the procedures as follows:

### ■ Show the current IP Address

1. On "**WGSW-20160HP:/>**" prompt, enter "**show ip**".
2. The screen displays the current IP address, Subnet Mask and Gateway as shown in Figure 5-1.

```
Username: admin
Password:
Login in progress...
WGSW-20160HP:/>show ip

IP Configuration:
*****

DHCP Client      : Disabled
IP Address       : 192.168.0.100
IP Mask          : 255.255.255.0
IP Router        : 192.168.0.1
DNS Server       : 0.0.0.0
VLAN ID          : 1
DNS Proxy        : Disabled

IPv6 AUTOCONFIG mode : Disabled
IPv6 Link-Local Address: fe80::230:4fff:fe00:1
IPv6 Address       : ::192.168.0.100
IPv6 Prefix        : %
IPv6 Router        : ::

Active Configuration for IPv6: (Static with Stateless)
IPv6 Address: fe80::230:4fff:fe00:1/64 Scope:Link
Status:UP/RUNNING(Enabled)/MTU 1500/LinkMTU is 1500
IPv6 Address: ::192.168.0.100/96 Scope:Global
Status:UP/RUNNING(Enabled)/MTU 1500/LinkMTU is 1500
WGSW-20160HP:/>
```

Figure 5-1: Display of IP Information

## ■ Configure IP Address

3. On "**WGSW-20160HP:/>**" prompt, enter the following command and press <Enter> as shown in Figure 5-2.

```
"WGSW-20160HP:/IP> setup 192.168.1.100 255.255.255.0 192.168.1.1
```

The previous command would apply the following settings for the Managed Switch.

**IP Address: 192.168.1.100**  
**Subnet Mask: 255.255.255.0**  
**Gateway: 192.168.1.1**

```
Username: admin
Password:
Login in progress...
WGSW-20160HP:/>show ip

IP Configuration:
*****
DHCP Client      : Disabled
IP Address       : 192.168.0.100
IP Mask          : 255.255.255.0
IP Router        : 192.168.0.1
DNS Server       : 0.0.0.0
VLAN ID          : 1
DNS Proxy        : Disabled

IPv6 AUTOCONFIG mode : Disabled
IPv6 Link-Local Address: fe80::230:4fff:fe00:1
IPv6 Address      : ::192.168.0.100
IPv6 Prefix       : 96
IPv6 Router       : ::

Active Configuration for IPv6: (Static with Stateless)
IPv6 Address: fe80::230:4fff:fe00:1/64 Scope:Link
Status:UP/RUNNING(Enabled)/MTU 1500/LinkMTU is 1500
IPv6 Address: ::192.168.0.100/96 Scope:Global
Status:UP/RUNNING(Enabled)/MTU 1500/LinkMTU is 1500
WGSW-20160HP:/>?ip
Type "up" or "exit" to move up one level or '/' to go to root level
WGSW-20160HP:/IP>setup 192.168.1.100 255.255.255.0 192.168.1.1
WGSW-20160HP:/IP>
```

**Figure 5-2:** Setting IP Address

4. Repeat Step 1 to check if the IP address is changed.

If the IP is successfully configured, the Managed Switch will apply the new IP address setting immediately. You can access the Web interface of Managed Switch through the new IP address.



### Note

If you are not familiar with console command or the related parameter, enter "**help**" anytime in console to get the help description.

## 6. Start Web Management

The following shows how to start up the **Web Management** of the Managed Switch. Note the Managed Switch is configured through an Ethernet connection. Please make sure the manager PC must be set on the same **IP subnet address**.

For example, the default IP address of the Managed Switch is **192.168.0.100**, then the manager PC should be set at **192.168.0.x** (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

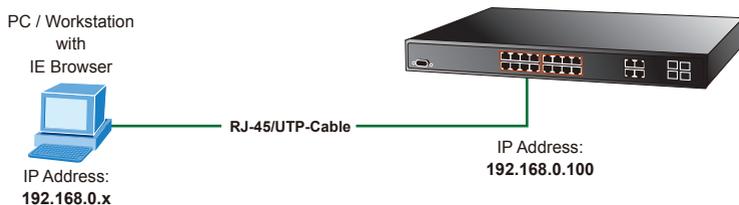


Figure 6-1: IP Management Diagram

### Login the Managed Switch

1. Use Internet Explorer 7.0 or above Web browser. Enter IP address **http://192.168.0.100** (the factory default IP address or the one that you have just changed in console) to access the Web interface.
2. When the following dialog box appears, please enter the default username and password "**admin**" (or the password you have changed via console). The login screen in Figure 6-2 appears.

Default Username: **admin**  
Default Password: **admin**



Figure 6-2: Login Screen

3. After entering the password, the main screen appears as Figure 6-3 shows.



Figure 6-3: Web Main Screen of Managed Switch

The Switch Menu on the left of the Web page lets you access all the commands and statistics the Managed Switch provides.



Figure 6-4: Switch Menu



Note

If you are not familiar with Switch functions or the related parameter, press **“Help icon”** anytime in the Web page to get the help description.


Now, you can use the Web management interface to continue the Switch management or manage the Switch by console interface.

Please refer to the user's manual for more.


### ■ Changing IP Address or forgetting admin password –

To reset the IP address to the default IP Address “**192.168.0.100**” or reset the login password to default value, press the hardware **reset button** at the front panel for about **10 seconds**. After the device is rebooted, you can login the management WEB interface within the same subnet of 192.168.0.xx.

#### [WGSW-20160HP Reset Button Location]

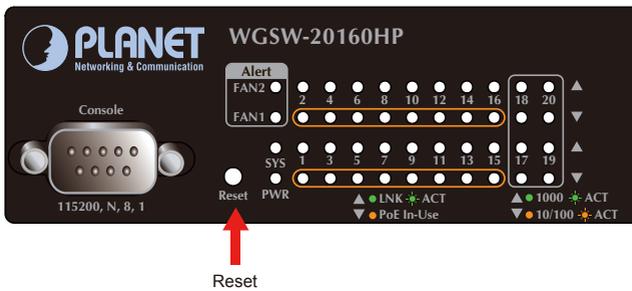

#### [WGSW-24040HP / WGSW-24040HP4 Reset Button Location]

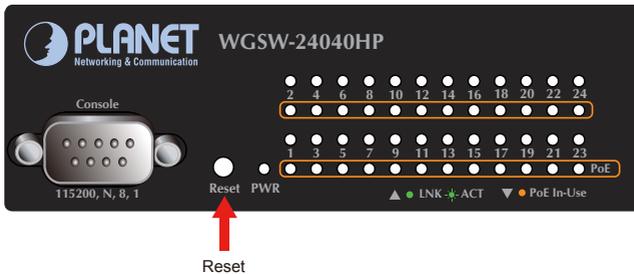

---

## ***Customer Support***

Thank you for purchasing PLANET products. You can browse our online FAQ resource at the PLANET website first to check if it could solve you issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQ :

<http://www.planet.com.tw/en/support/faq.php?type=1>

Switch support team mail address :

[support\\_switch@planet.com.tw](mailto:support_switch@planet.com.tw)

Copyright © PLANET Technology Corp. 2013.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.