

Quick Installation Guide

FRT-405N

300Mbps 802.11n Wireless Internet Fiber Router



1. Package Contents

Thank you for choosing PLANET FRT-405N. Before installing the AP, please verify the contents inside the package box.

FRT-405N

Quick Guide

CD-ROM



5dBi Antenna x 2

Power Adapter



If there is any item missing or damaged, please contact the seller immediately.

- 1 -

2. Physical Introduction

Front Panel of FRT-405N



Rear Panel of FRT-405N



- 2 -

3. Hardware Installation

STEP 1: Locate the FRT-405N in an optimum place, and adjust the antenna for the best coverage.




STEP 2: Follow the figure below to connect the WAN port.



- 3 -

STEP 3: Follow the figure below to connect the network devices.

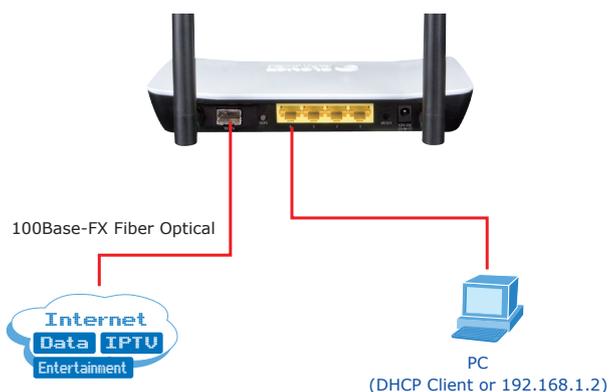


STEP 4: Connect the Power Adapter to the FRT-405N. Check whether the PWR LED and LAN LED on the front panel are on accordingly.





- 4 -

Application

Point-to-Point Fiber Bridge

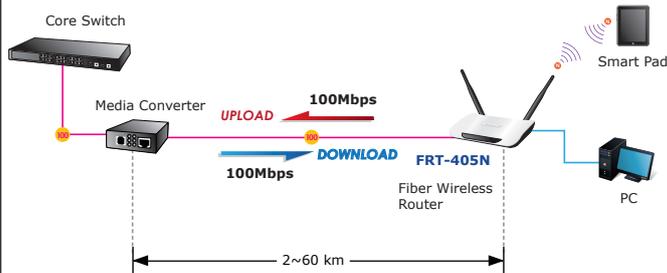

Point-to-Multipoint Fiber Router

 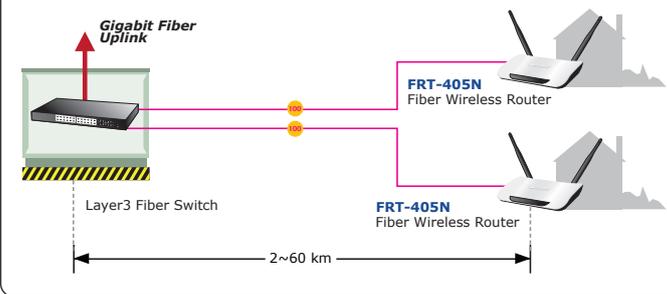



- 5 -

4. Web Login

STEP 1: Connect the FRT-405N with your PC over an Ethernet cable which is plugged into LAN port. Power on the FRT-405N using the power adapter.

STEP 2: Set your computer to get an IP address from the Wireless Router:

1. Click **"Start"** button located at the lower-left corner of your computer
2. Click **"Control Panel"**
3. Double click **"Network and Sharing Center"** icon
4. Click **"Change Adapter Settings"**
5. Double click **"Local Area Connection"**
6. Select **"Internet Protocol Version 4(TCP/IPv4)"** and click **"Properties"**
7. Select **"Obtain an IP Address automatically"** and **"Obtain DNS Server Address automatically"**, and then click **"OK"** button twice to save the configuration.

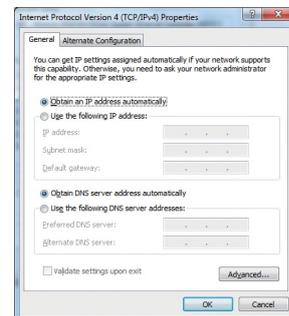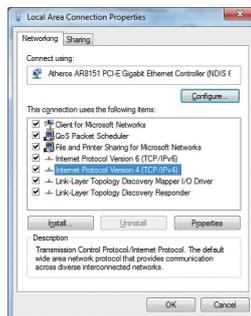

- 6 -

5. Enter into the Web Management

Default IP Address: **192.168.1.1**

Default User Name: **admin**

Default Password: **admin**

Default SSID: **FRT405N**

STEP 1: The Web management allows you to access and manage the Wireless Router easily. Launch the Web browser and enter the default IP address **http://192.168.1.1**



STEP 2: When the login window pops up, please enter the User Name and Password. The default User Name and Password are both **"admin"**.

Then click **OK** button to continue.



- 7 -

STEP 3: Now, you can see the Web management UI of the FRT-405N.

Please go to **Wireless Settings** page to configure your wireless network. For security reasons, strongly recommended to configure the Encryption Method and Passphrase of your wireless network.



Further Information

The above steps introduce simple installations and configurations for the FRT-405N. For further configurations of different operation modes, please refer to the user's manual on the CD. If you have further questions, please contact the local dealer or distributor where you purchased this product.

2010-B53060-000

- 8 -