

## Quick Installation Guide

WDAP-1750AC

1750Mbps 802.11ac Dual Band Wall-mount Wireless Access Point



### 1. Package Contents

Thank you for choosing PLANET WDAP-1750AC. Before installing the AP, please verify the contents inside the package box.


The WDAP-1750AC should contain the following items in the package:



**Note** If there is any item missing or damaged, please contact the seller immediately.


## 2. Physical Introduction

### Panel Description - Port

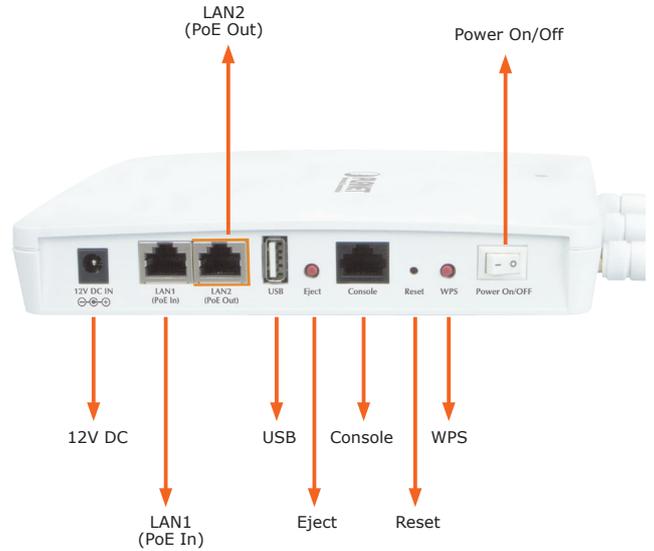


### 3. Hardware Installation

**STEP 1:** Attach the two magnetic wall-mount strips to your wall using the included screws, as shown below.

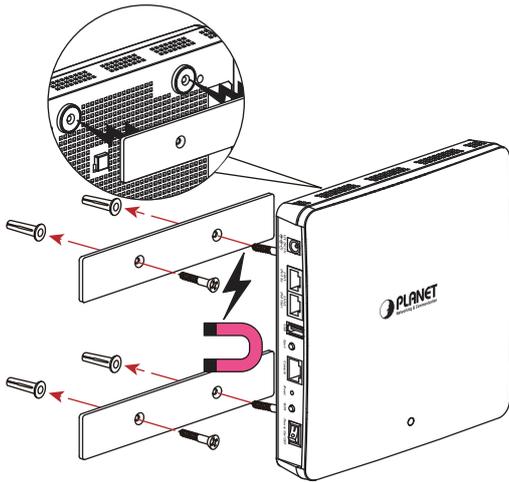

**STEP 2:** Fasten the antennas to the antenna connectors. And you can bend the antennas to fit your actual needs.

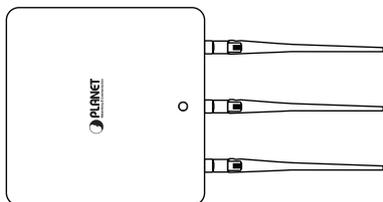


#### STEP 3: Method A - Power socket nearby

Connect the power adapter to the access point's 12V DC port and plug the power adapter into a power supply.


#### Method B - Hard to find the power socket

Plug the RJ45 Ethernet cable into the PoE port of the WDAP-1750AC and the other end of the Ethernet cable into the PoE switch.

#### • Method A - Power socket nearby

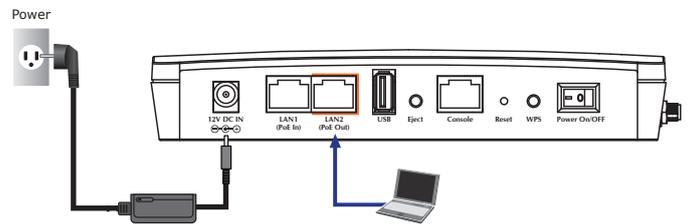


#### • Method B - Hard to find the power socket

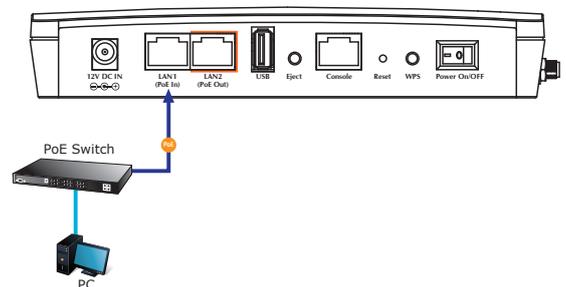

## 4. Wired Network Configuration (Windows 7)

A computer with wired Ethernet connection is required for the first-time configuration of the wireless AP.

1. Click **"Start"** button located in the lower-left corner of your computer.
2. Click **"Control Panel"**.
3. Double-click **"Network and Sharing Center"** icon.
4. Click **"Change Adapter Settings"**.
5. Double-click **"Local Area Connection"**.
6. Select **"Internet Protocol Version 4 (TCP/IPv4)"** and click **"Properties"**.
7. Select **"Use the following IP address"** and then click **"OK"** button twice to save the configuration. For example, as the default IP address of the WDAP-1750AC is 192.168.1.253 and the router is 192.168.1.254, you may choose from 192.168.1.1 to 192.168.1.252.

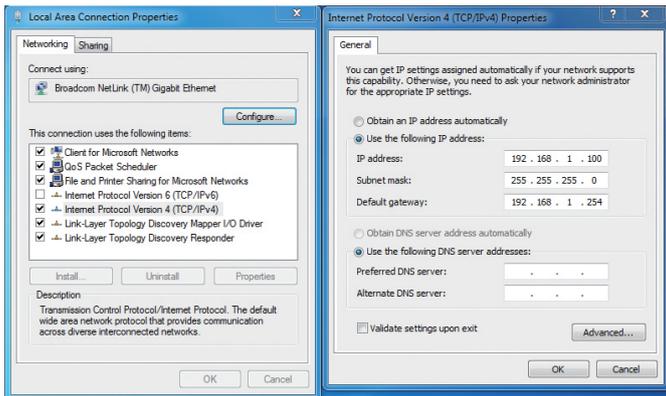

- 5 -

## 5. Entering into the Web Management

Default IP Address: **192.168.1.253**  
Default Username: **admin**  
Default Password: **admin**  
Default SSID (2.4GHz): **PLANET\_2.4G\_XXXX**  
Default SSID (5GHz): **PLANET\_5G\_XXXX**  
**("X" means the last 4 digits of the MAC address)**

**STEP 1:** The Web management allows you to access and manage the wireless AP easily. Launch the Web browser and enter the default IP address -- **<http://192.168.1.253>**.



**STEP 2:** After you enter into the Web User Interface, go to **Wireless Settings** to configure your wireless network. For security reasons, strongly recommended to configure the Encryption Method and Passphrase of your wireless network.



- 6 -

## 6. Wireless Network Connection

**STEP 1:** Right-click on the **network icon** displayed in the system tray.



**STEP 2:** Highlight the wireless network (SSID) to connect and click **[Connect]** button.



- 7 -

**STEP 3:** Enter the **encryption key** of the WDAP-1750AC if **necessary**.

You have already finished the configuration of the WDAP-1750AC. Now you can use your iPhone, iPad, laptop, or any other Wi-Fi device to connect with it wirelessly and start surfing the internet.

### Further Information:

The above steps introduce simple installations and configurations for the WDAP-1750AC. For further configurations of LAN, Wireless, Access Control, etc, please refer to the user manual which you can download from the website.

<http://www.planet.com.tw/en/support/download.php?type1=4&model=48591&type=3>



If you have further questions, please contact the local dealer or distributor where you purchased this product.

2011-E11030-000

- 8 -