

H.265+ 16-ch 4K Network Video Recorder

NVR-1600

Quick Installation Guide

Table of Contents

1. Package Contents	3
2. Hard Disk Installation.....	4
3. Requirements	5
4. Starting Web Management	6
4.1 Logging in to the NVR-1600.....	7
5. Customer Support	9

1. Package Contents

Thank you for purchasing PLANET H.265+ 16-ch 4K Network Video Recorder, NVR-1600. Open the box of the NVR-1600 and carefully unpack it. The box should contain the following items:

- The NVR-1600 x 1
- QR Code Sheet x 1
- HDD Screw Package x 1
- Power Adapter x 1
- SATA cable x 1

If any item is found missing or damaged, please contact your local reseller for replacement.

2. Hard Disk Installation


The hard disk is installed as shown in Figure 2-1.

- (1) Unscrew the cover to open the cover.
- (2) Connect one end of the hard disk data cable and power cable to the motherboard, and connect the other end to the hard disk.
- (3) Turn over the chassis, mount the hard disk in the indicated position and screw it tightly.
- (4) Now turn over the chassis again and cover it with screws.




Note

1. Before installation, make sure the power is disconnected.
2. It is recommended to use surveillance-grade HDDs designed for 24/7 operation.

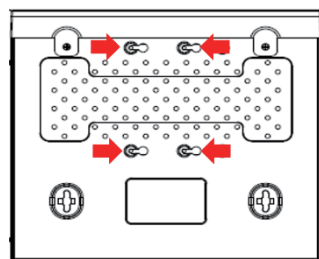

(1)

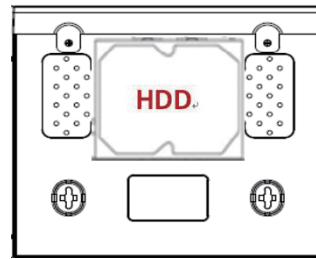

(2)

Figure 2-1: Hard Disk Installation

3. Requirements

- Workstations running Windows 7 / 8 / 10 / 11, Linux, UNIX, or other TCP/IP-compatible platforms are supported.
- Workstations are installed with Ethernet NIC (Network Interface Card)
- Ethernet Port Connection
 - **Network cables** -- Use standard network (UTP) cables with RJ45 connectors.
 - The above PC is installed with **Web browser**.



Note

It is recommended to use Internet Chrome 98.0.xxx or above to access the NVR-1600. If the Web interface of the NVR-1600 is not accessible, please turn off the anti-virus software or firewall and then try it again.

4. Starting Web Management

The following shows how to start up the **Web Management** of the NVR-1600. Note the NVR-1600 is configured through an Ethernet connection. Please make sure the manager PC must be set to the same **IP subnet address**.

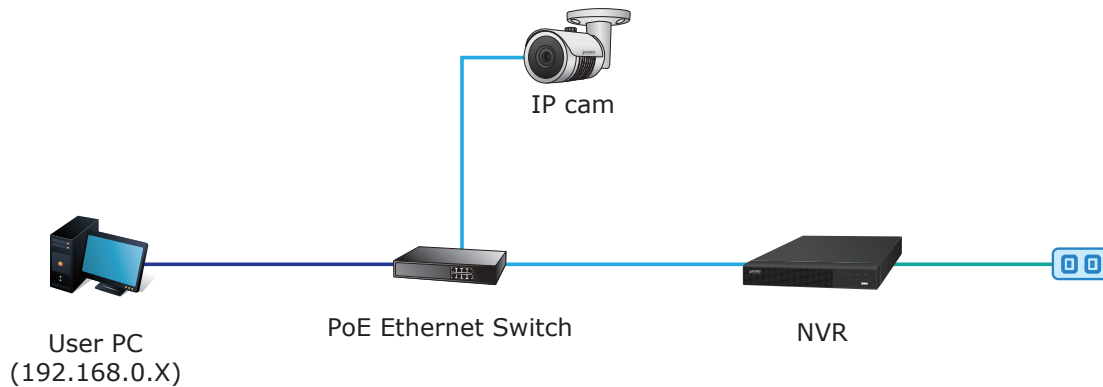


Figure 4-1: IP Management Diagram



Note

1. Make sure the input voltage matches the NVR consumption. Connect the device to the monitor and the power adapter (if available). Plug in the power and switch on the power button (if available) for the device to boot up.
2. It is recommended that you refer to international standards for power supply input with stable voltage values and low ripple interference.

For example, the NVR-1600 default network type is **DHCP Client**; to search the current IP address of the NVR-1600, follow the procedure below:

1. Download the **"PLANET Search Tools"** utility from the following PLANET website link: <http://www.planet.com.tw/en/support/downloads?method=keyword&keyword=PLANET+Search+Tools&view=6#list>
2. Install the **"PLANET Search Tools"** utility.
3. After the utility is launched, all NVRs found in your local area network will be displayed.
4. The existing NVR-1600 in the local network.
5. Search the NVR-1600 in the network.
6. Modify the IP parameters of the selected NVR-1600.
7. Select the NVR-1600 you want to configure and double-click on it.
8. You will be connected to the NVR-1600 series via web browser automatically.

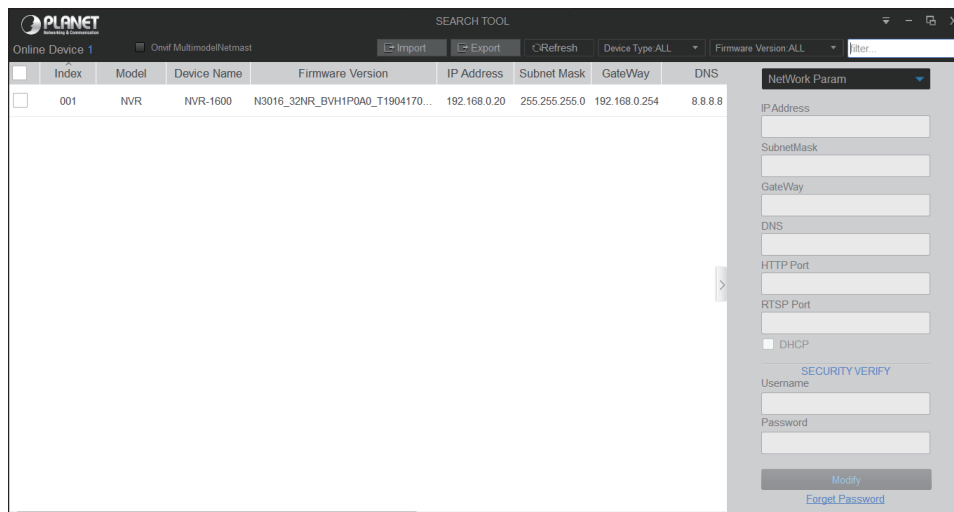


Figure 4-2: PLANET Search Tools Utility Screen

9. Without DHCP server, the NVR-1600 default IP address is **192.168.0.20**. Then the manager PC should be set to **192.168.0.x** (where x is a number between 1 and 254, except 20), and the default subnet mask is 255.255.255.0.

4.1 Logging in to the NVR-1600

1. When the following dialog box appears, enter the default user name and password "**admin**". The login screen in Figure 4-3 appears.

Default Username: **admin**
Default Password: **admin**



Note

For security reasons, please change the default password after the first login.

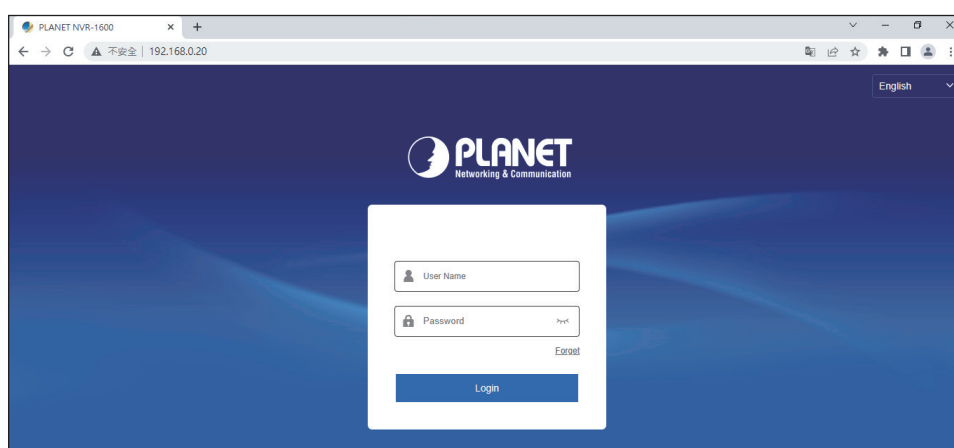


Figure 4-3: NVR-1600 Web Login Screen



Note

If the Web interface cannot be accessed, please check the browser security settings or temporarily disable firewall or anti-virus software and try again.

2. After entering the username and password, the main screen appears as Figure 4-4 shows.

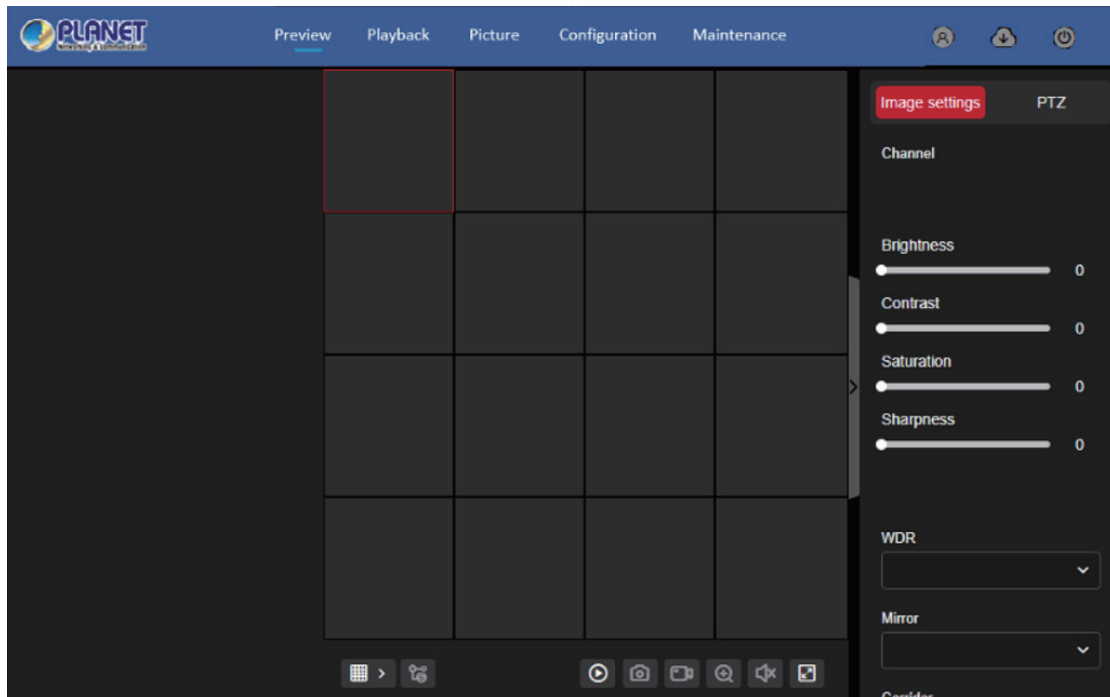


Figure 4-4: Web Main Screen of NVR-1600

Now, you can use the Web management interface to continue the NVR-1600 management.

Please refer to the user's manual for more.

5. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource and User’s Manual on PLANET Web site first to check if it could solve your issue. If you need more support information, please contact PLANET support team.

PLANET online FAQs:
<https://www.planet.com.tw/en/support/faq>

Support team mail address:
support@planet.com.tw

NVR-1600 User’s Manual:
<https://www.planet.com.tw/en/support/downloads?&method=keyword&keyword=NVR-16&view=3#list>



(Please select your NVR model name from the Product Model drop-down menu.)

Android APP	IOS APP
	

Copyright © PLANET Technology Corp. 2026.
Contents are subject to revision without prior notice.
PLANET is a registered trademark of PLANET Technology Corp.
All other trademarks belong to their respective owners.

EU Representative
PLANET Technology Europe B.V.
Address: Posthoornstraat 11, 3011 WD Rotterdam, NL
Email: eu_rep@planet.com.tw
URL: www.planet.com.tw