

**24-Port 100/1000X SFP + 4-Port 10G SFP+ Managed
Metro Ethernet Switch**

MGSW-28240F

Quick Installation Guide

Table of Contents

1. Package Contents	3
2. Requirements	4
3. Wiring DC Power Inputs	5
4. Terminal Setup	6
5. Logon to the Console	7
6. Configuring IP Address	8
7. Starting Web Management	10
8. Customer Support	12

1. Package Contents

Thank you for purchasing PLANET Managed Metro Ethernet Switch, MGSW-28240F. The term "**Managed Switch**" mentioned in this Quick Installation Guide refers to the MGSW-28240F.

Open the box of the **Managed Switch** and carefully unpack it. The box should contain the following items:

- ◆ The MGSW-28240F Switch x 1
- ◆ User's Manual CD x 1
- ◆ Quick Installation Guide x 1
- ◆ DB9 to RJ-45 Console Cable x 1
- ◆ Dust Cap x 33
- ◆ Rubber Feet x 4
- ◆ Rack Mount Accessory Kit x 1
- ◆ AC Power Cord x 1

If any item is found missing or damaged, please contact your local reseller for replacement.

2. Requirements

- Workstation should be running Windows XP/Vista/7/8, Windows 2003/2008, MAC OS X or later, Linux, UNIX or other platforms compatible with TCP/IP protocols.
- Workstation should be installed with Ethernet NIC (Network Interface Card)
- **Serial Port Connection** (Terminal)
 - The above workstation should come with COM Port (DB9)
- **Ethernet Port Connection**
 - Network cables - Use standard network (UTP) cables with RJ-45 connectors.
 - The above PC should be installed with WEB Browser and JAVA runtime environment Plug-in.




Note

It is recommended to use Internet Explore 7.0 or above to access the Managed Switch.


3. Wiring DC Power Inputs

The 6-contact terminal block connector on the rear panel of the MGSW-28240F is used for two DC redundant power inputs. Please follow the steps below to insert the power wire.

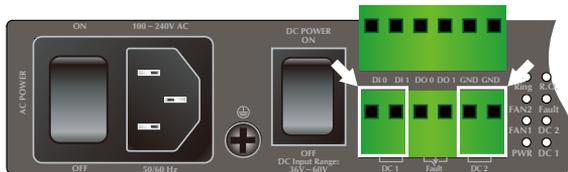

Insert positive / negative DC power wires into contacts 1 and 2 for DC POWER 1, or 5 and 6 for DC POWER 2.

1. Tighten the wire-clamp screws for preventing the wires from loosening.

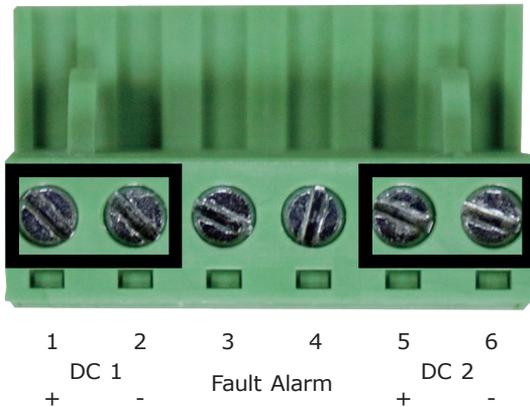


Note

The wire gauge for the terminal block should be in the range of 12 ~ 24 AWG.

The DC Input range is from 36V to 60V DC.

4. Terminal Setup


To configure the system, connect a serial cable to a **COM port** on a PC or notebook computer and to serial (console) port of the Managed Switch. The console port of the Managed Switch is DCE already so that you can connect the console port directly through the PC without the need of Null Modem.

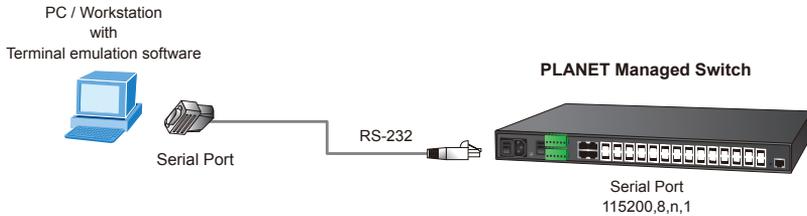

A terminal program is required to make the software connection to the Managed Switch. Windows' **Hyper Terminal** program may be a good choice, or you can download the other utility from Internet, such as Putty, TeraTerm.

1. Enables terminal emulator.
2. When the following screen appears, make sure that the COM port should be configured as:

- **Baud** : **115200**
- **Data bits** : **8**
- **Parity** : **None**
- **Stop bits** : **1**
- **Flow Control** : **None**

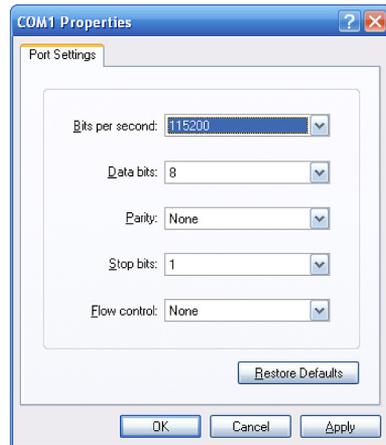


5. Logon to the Console

Once the terminal has been connected to the device, power on the Managed Switch and the terminal will display "running testing procedures".

Then, the following message asks for the login use rname and password. The factory default username and password are **admin** as the login screen in Figure 5-1 appears.

Username: **admin**
Password: **admin**

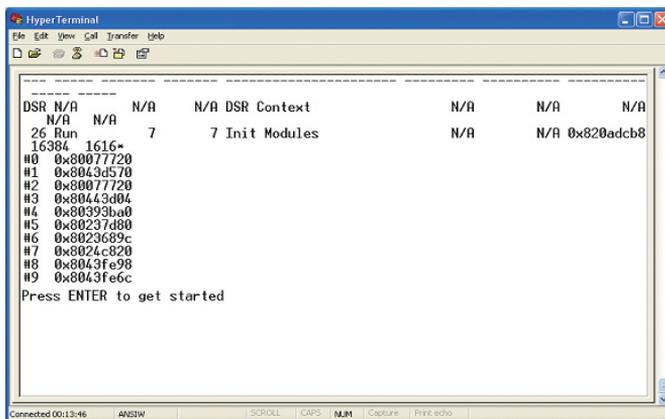

```
HyperTerminal
File Edit View Call Transfer Help
-----
DSR N/A N/A N/A DSR Context N/A N/A N/A
N/A N/A N/A
26 Run 7 7 Init Modules N/A N/A 0x820adc8
16384 1616*
#0 0x80077720
#1 0x8043d570
#2 0x80077720
#3 0x80443d04
#4 0x80393ba0
#5 0x80237d80
#6 0x8023689c
#7 0x8024c820
#8 0x8043fe98
#9 0x8043fe6c
Press ENTER to get started
-----
Connected 00:13:46 ANSW SCROLL CAPS M.M Capture Print echo
```

Figure 5-1: MGSW-28240F Managed Switch Console Login Screen



1. For security reason, please change and memorize the new password after this first setup.
2. Only accept command in lowercase letter under console interface.

6. Configuring IP Address


The Managed Switch is shipped with default IP address as shown below:

```
IP Address: 192.168.0.100  
Subnet Mask: 255.255.255.0
```

To check the current IP address or modify a new IP address for the switch, please use the procedures as follows:

■ Show the current IP address

1. On "**MGSW-28240F#**" prompt, enter "**show ip interface brief**".
2. The screen displays the current IP address, Subnet Mask and Gateway as shown in Figure 6-1.

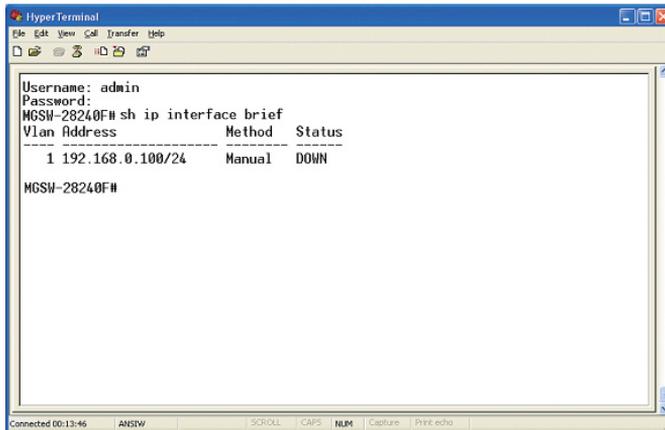

```
HyperTerminal
File Edit View Call Transfer Help
MGSW-28240F#
Username: admin
Password:
MGSW-28240F# sh ip interface brief
Vlan Address          Method  Status
-----
1 192.168.0.100/24    Manual  DOWN
MGSW-28240F#
```


Figure 6-1: Show IP Information Screen

■ Configuring IP address

3. On "MGSW-28240F#" prompt, enter the following command and press <Enter> as shown in Figure 6-2.

The previous command would apply the following settings for the Switch.

IP Address: 192.168.0.101
Subnet Mask: 255.255.255.0

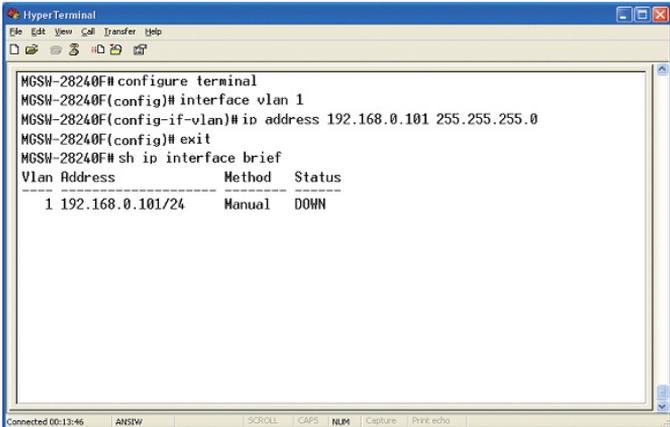

```
MGSW-28240F# configure terminal
MGSW-28240F(config)# interface vlan 1
MGSW-28240F(config-if-vlan)# ip address 192.168.0.101 255.255.255.0
MGSW-28240F(config)# exit
MGSW-28240F# sh ip interface brief
Vlan Address          Method  Status
-----
1 192.168.0.101/24    Manual  DOWN
```

Figure 6-2: Set IP Address Screen

4. Repeat Step 1 to check if the IP address is changed.

If the IP is successfully configured, the Managed Switch will apply the new IP address setting immediately. You can access the Web interface of the Managed Switch through the new IP address.



Note

If you are not familiar with console command or the related parameter, enter "help" anytime in console to get the help description.

5. User needs to save configuration when all configurations have been finished or the configuration will be reset after system rebooted. The configuration saving command has shown following.

```
MGSW-28240F# copy running-config startup-config
```

7. Starting Web Management

The following shows how to start up the **Web Management** of the Managed Switch. Note the Managed Switch is configured through an Ethernet connection. Please make sure the manager PC must be set on the same **IP subnet address**.

For example, the default IP address of the Managed Switch is **192.168.0.100**, then the manager PC should be set at **192.168.0.x** (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

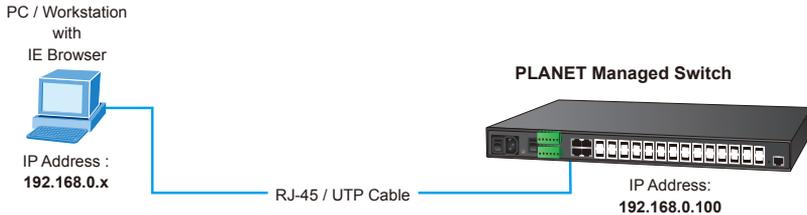


Figure 7-1: IP Management Diagram

Login the Managed Switch

1. Use Internet Explorer 7.0 or above Web browser and enter IP address **http://192.168.0.100** (the factory-default IP address or that you have just changed in console) to access the Web interface.
2. When the following dialog box appears, please enter the default username and password "**admin**" (or the password you have changed via console). The login screen in Figure 7-2 appears.

Default Username: **admin**
Default Password: **admin**



Figure 7-2: Login Screen

3. After entering the password, the main screen appears as shown in Figure 7-3.

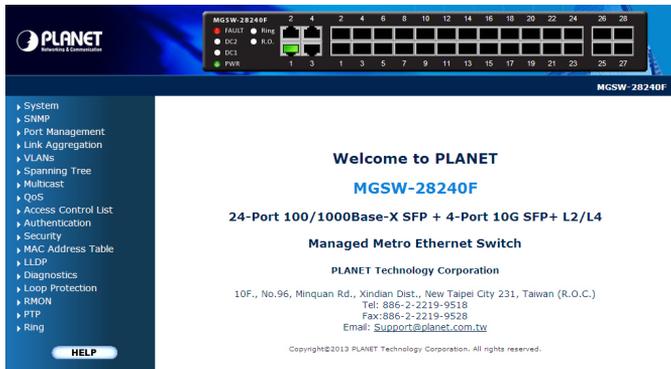


Figure 7-3: Web Main Screen of the Managed Switch



Note


If you are not familiar with Switch functions or the related parameter, press **"Help"** button anytime on the left of the Web page to get the help description.

Now, you can use the Web management interface to continue the Switch management or manage the Switch by console interface.

Please refer to the user manual for more details.

■ When IP Address has been changed or forgotten – password: “admin”

To reset the IP address to the default IP Address “192.168.0.100” or reset the login password to default value, press the hardware **reset button** on the front panel for over **5 seconds**. After the device is rebooted, you can login to the management Web interface within the same subnet of 192.168.0.xx.

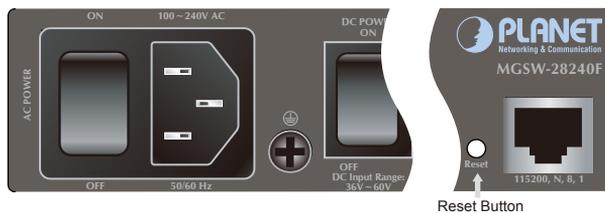

8. Customer Support

Thank you for purchasing PLANET products. You can browse our online FAQ resource at the PLANET website first to check if it could solve your issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQ :

http://www.planet.com.tw/en/support/faq.php?mt=menu_support_1

Switch support team mail address :

support_switch@planet.com.tw

Copyright © PLANET Technology Corp. 2014.

Contents are subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp.

All other trademarks belong to their respective owners.